

TR2 TRANSPONDER

QUICK START GUIDE



WHAT'S IN THE BOX?



TR2 Transponder



TR2 Charge Cradle



TR2 Holder



USB Micro Cable

IMPORTANT!

You need to **register and activate** your transponder in the Speedhive App

- ▶ The TR2 Transponder is only compatible with devices running Bluetooth 4.0 or higher (most modern mobile phones have this)
- ▶ Make sure to fully charge your TR2 Transponder before racing
- ▶ To register, follow the “Transponder Registration” steps below


IF YOU DON'T REGISTER AND ACTIVATE YOUR TRANSPONDER, YOUR TRANSPONDER WILL NOT WORK

TRANSPONDER REGISTRATION


1 DOWNLOAD THE SPEEDHIVE APP

- ▶ Scan the QR Code to download the Speedhive App

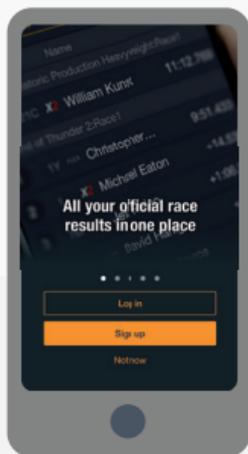


2**LOGIN / SIGN UP IN THE SPEEDHIVE APP**

▶ Already logged into your Speedhive account? Then go to 'My Profile' to register the TR2 Transponder

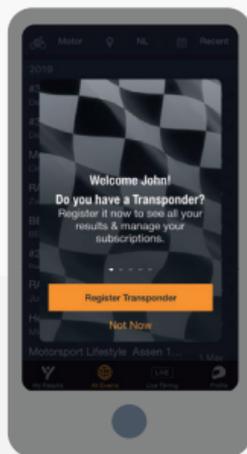3**REGISTER TRANSPONDER**

▶ Make sure to turn on Bluetooth on your mobile device

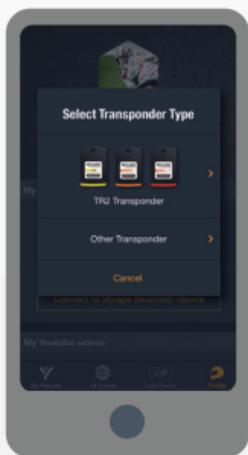4**SELECT TRANSPONDER TYPE**

▶ Place the TR2 Transponder in the powered TR2 Charge Cradle

5**SELECT DETECTED TRANSPONDER**


6

REGISTER TRANSPONDER TO ACCOUNT




7

YOUR TRANSPONDER IS REGISTERED

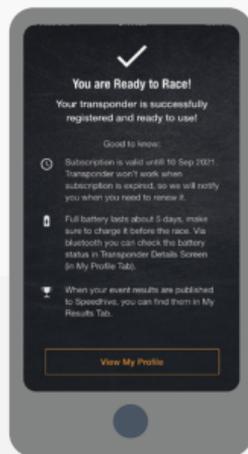


8

CHECK YOUR SUBSCRIPTION

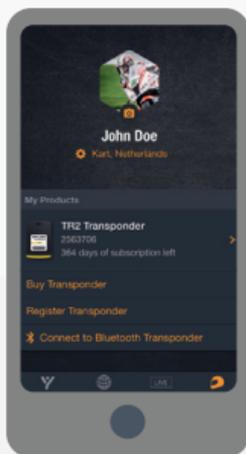

9

TRANSPONDER DETAILS

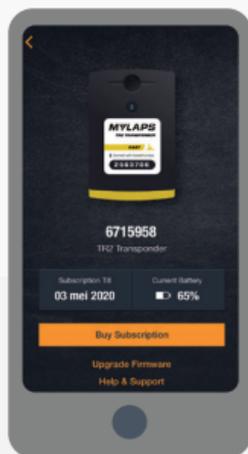

► Under 'My Products', tap on your Transponder for Transponder details

TRANSPONDER LED INDICATION **(IN THE CRADLE)**



LED INDICATION	COLOR	MEANING
 BLINKING	RED	1 BLINK PER SEC = CHARGING
 STEADY	GREEN	BATTERY FULL (CRADLE ONLY)
 STEADY	BLUE	CONNECTED
 NO LIGHT	NO LIGHT	SLEEPING
 FAST BLINKING	RED	5 BLINKS PER SEC = SUBSCRIPTION EXPIRED

► It takes 5 hours to fully charge the TR2 Transponder

TRANSPONDER LED INDICATION **(OUT OF THE CRADLE)**




LED INDICATION	COLOR	MEANING
 BLINKING	GREEN	4 GREEN BLINKS = MINIMAL 4 DAYS RACING 3 GREEN BLINKS = MINIMAL 3 DAYS RACING 2 GREEN BLINKS = MINIMAL 2 DAYS RACING 1 GREEN BLINK = MINIMAL 1 DAY RACING
 BLINKING	RED	1 RED BLINK = LESS THAN 1 DAY RACING
 FAST BLINKING	RED	5 BLINKS PER SEC = SUBSCRIPTION EXPIRED


MOUNTING THE TRANSPONDER

- For the best accuracy, make sure to mount your TR2 Transponder as vertical as possible.

BIKE & MX

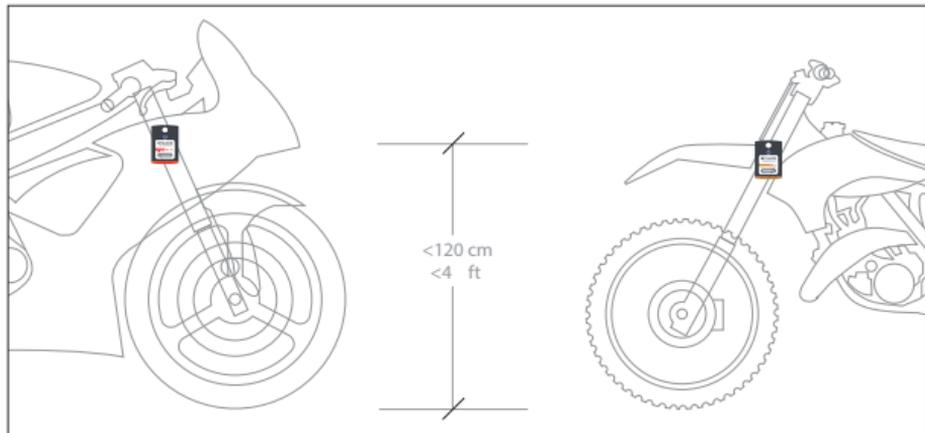

CAR & KART

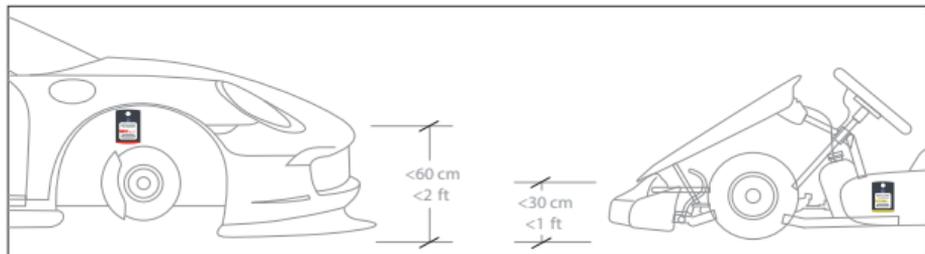

MYLAPS EMEA Office
Haarlem, The Netherlands
☎ +31 (0)23 760 0100
✉ info@mylaps.com

MYLAPS Americas Office
Atlanta, USA
☎ +1 678 816 4000
✉ info.americas@mylaps.com

MYLAPS Japan Office
Tokyo, Japan
☎ +81 3 6418 8209
✉ info.japan@mylaps.com

MYLAPS Asia Office
Selangor, Malaysia
☎ +60 3 5613 1235
✉ info.asia@mylaps.com

MYLAPS APAC Office
Sydney, Australia
☎ +61 2 9533 1100
✉ info.asia.pacific@mylaps.com

**FOR TECHNICAL
QUESTIONS, VISIT
HELP.MYLAPS.COM**