
 
 
Handlebar Remote Quick Start Guide

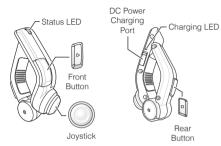

Installation



Charging



Button Operation





Handlebar Remote Power On/Off

Power On



Front Button


Power Off



Handlebar Remote Battery Check



Handlebar Remote - Headset Bluetooth Pairing

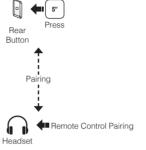

Note:

- You can control the headset using the Handlebar Remote only after you pair them together.
- The Handlebar Remote supports Sena headsets with Bluetooth 4.0.

Handlebar Remote Factory Reset



Handlebar Remote Button Matching

Once the Handlebar Remote and the Headset are paired, the buttons match in the following order.

Jog Dial Type Headsets

Handlebar Remote	Jog Dial Type Headset
Joystick 1" Press	Jog Dial
Joystick Move	Jog Dial Rotating
Joystick Hove	Rotating while Pressing
Front Button	Phone Button

Other Type Headsets

Please go through the button instructions in the following pages.

Note:

The Rear Button controls distinct headset buttons such as the Ambient Mode Button of the 20S.

Headset Volume Adjustment



Headset Configuration Menu








⊾ Pre

15.Apr. 2 3 5



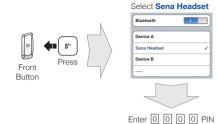

Music Operation





Call Making and Answering

 
Answer

End

Voice Dial

Reject


Call Transfer






Front

 
Button




Button



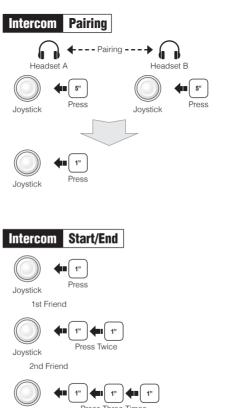

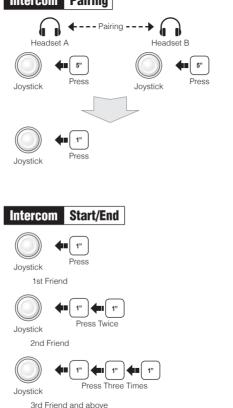

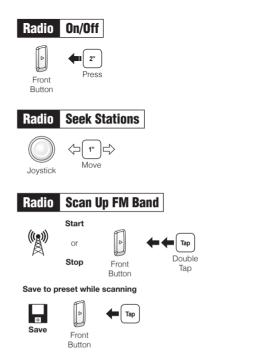


Radio Move to Preset Station

Front

Button

|1|→|2|→…|5|…→|9|→|10|

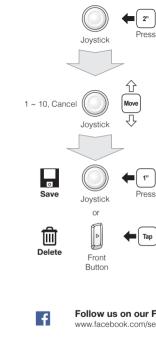

Radio Save or Delete Preset



Sena Technologies, Inc.

www.sena.com SENA Customer Support: support.sena.com Tel: 408-300-9797 E-mail: support@sena.com