



10U for Shoei Neotec Quick Start Guide

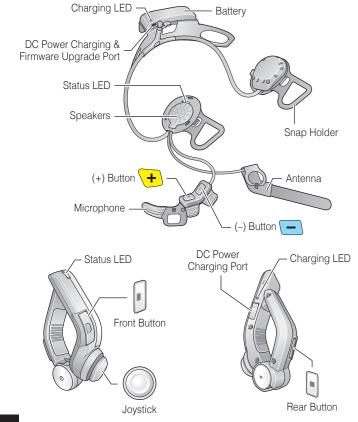


Installation

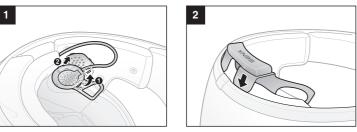

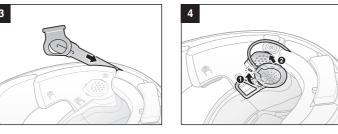

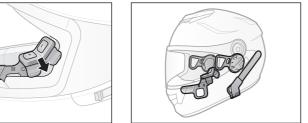


Charging

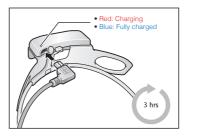


Button Operation





Power On/Off




Volume Adjustment



Phone, Music Pairing

Music Operation

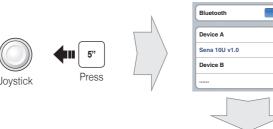

Joystick



Select Sena 10U













Front Button

Тар Rear Button



Mobile Phone Call Making and Answering







Double Tap





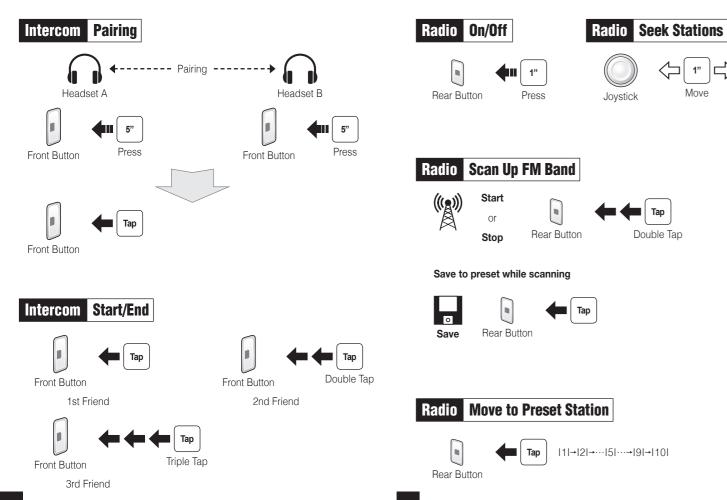

Radio Save or Delete Preset

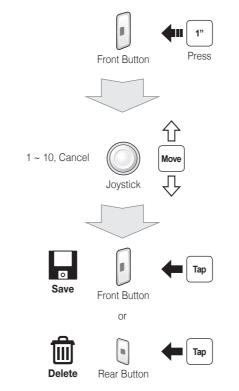

Setting

Configuration Menu



settings.



leaflet included in the package.

Using the Sena Device Manager

Using the Sena Smartphone App

www.sena.com/app for more details.

2. Pair your smartphone with the headset.

Setting to configure the headset settings.



Connect the headset to your computer via a USB cable. Launch the Sena

For details about downloading the Sena Device Manager, please refer to the

1. On your smartphone, download the Sena Smartphone App for Android or

3. Run the Sena Smartphone App. Swipe the screen to the right and tap

iPhone from Google Play or App Store. Please refer to

Device Manager and click **DEVICE SETTING** to configure the headset

Factory Reset

operations.

If you want to restore the 10U to factory default settings, use the Factory Reset in the configuration menu. The headset automatically restores the default settings and turns off.

If the Handlebar Remote becomes disconnected with your headset, recharge

the Handlebar Remote or go through the pairing process again. Meanwhile, you can use the headset control buttons to operate the headset. Please refer

to the User's Guide at www.sena.com for details on headset control button

Fault Reset

If the 10U is not working properly for any reason, reset by gently pushing the pin-hole reset button located on the left

Handlebar Remote Disconnection



A full version of the manual is downloadable at www.sena.com.



Sena Technologies, Inc.

www.sena.com Customer Support: support.sena.com E-mail: support@sena.com

Double Tap